

Instruction manual

adventure extreme stroller



Keep for future reference.

To reduce the risk of serious injury or death, read this owner's manual prior to using this product.

adventure e

GENERAL WARNINGS



To greatly reduce the risk of injury or death, please read this owner's manual before installing and using this stroller to ensure proper use.

Stroller

- **NEVER LEAVE YOUR CHILD UNSUPERVISED IN THE STROLLER.**
- **ALWAYS APPLY THE PARKING BRAKE WHEN YOU PARK THE STROLLER OR WHEN TAKING YOUR CHILD IN/OUT OF STROLLER.**
- Make sure children are clear of any moving parts when adjusting the stroller, otherwise they may be injured. Care should be taken whilst folding and unfolding the stroller to prevent fingers being trapped.
- This stroller is suitable for one child only. Do not carry extra children or bags on this stroller. Do not place heavy weights on the handle of the stroller as it will impact the stability of the frame.
- The seat is suitable from birth up to 17kg.
- The stroller is not intended to be a substitute baby cot or bed. It is only designed to enable safe transportation of children.
- Always take your child out of the pram when on stairs.
- We do not recommend using the stroller for jogging.

Harness

- To avoid serious injury, always use the safety harness when your child is in the stroller. Always adjust the straps to suit the size of your child's body and to fit firmly. A loose restraint or harness is **DANGEROUS**.
- Never leave a harness connected when not fitted to a child in the stroller. The harness can form loops which may be a strangulation hazard.
- The buckle **SHOULD ALWAYS** be easily accessible. It is important that your child can be released quickly in the event of an emergency.

GENERAL WARNINGS (cont.)



Accessories

- Use the safety strap located on the handle at all times.
- When installing capsule in the stroller, ensure the parking brake is engaged at all times.
- It is unsafe to use car seats and other accessories other than those supplied by Adventure.

Storage

- Keep away from fire and extreme heat. Do not store in areas that may get particularly hot in summer like roof space or beside shed walls.

By following instructions as well as care tips, your stroller will last for many years to come.

If in doubt, please contact Adventure or your retailer.

Stroller components

In this manual we will help you with putting your new stroller together. Your Extreme should come with the following:

Main components:

- Stroller frame with seat unit and sun canopy
- Rear wheel axle
- Car seat capsule* adaptors for stroller
- 3 rubber tyres
- Bumper bar
- Parent console

*Car seat capsule sold separately. Capsule not available in Australia.

Wheel installation and removal

Rear axle and wheels:

To install the axle, insert the axle tubing to the stroller strut tubing. Ensure it's installed with the metal button through the hole in the tubing until you hear a **CLICK!** See picture (a) below.

To install the wheel, simply insert the rod on the wheel hole located on each wheel strut until you hear a **CLICK!** See picture (b) below.



To remove a rear wheel, push down the metal lever on the wheels (as pictured below) and pull the wheel outwards simultaneously.



Front wheel:

To install the wheel, insert the wheel rod into the frame hole (as pictured below) until you hear a **CLICK!**



Unfolding and folding the stroller



Unfolding:

Lie the stroller on the ground with the handle facing towards you (as pictured in (a)).

Remove the red locking clip.

Lift the handle bar upwards in a quick motion and the stroller will unfold and **CLICK!** into place.

Folding:

Pull the two sliding levers (as pictured in (b)) just below the handle bar on each side of the stroller frame, then push the handle downwards towards the floor.

Secure the stroller by using the red locking clip found on the right hand side.

Car capsule* installation and removal

*Car seat capsule sold separately. Not available in Australia

Ensure the stroller seat position is set to recline. This allows room for the capsule to fit in place. Insert the adaptor tracks into the stroller frame and click the button simultaneously (as pictured below).



Insert the capsule, in a rear facing position, into the adaptors with the handle upright (as pictured below) until you hear a **CLICK!**



Removing the capsule:

Press the two buttons located on the adaptor and simultaneously lift upwards (as pictured below).



Car seat installation and removal cont.

Terrain strap

For added stability of the capsule over uneven terrain, the optional terrain strap can be secured over the capsule as pictured below.



Seat and leg rest adjustment

Seat recline:

To adjust the recline, pull up the black metal lever at the rear of the seat upwards (as pictured in (a) below) and raise or lower the seat to the desired position (lie flat, reclined or seated).

Leg rest height:

To raise or lower the leg rest, press the two buttons on both sides of the leg rest hinge (as pictured in (b)) until you hear it **CLICK!** into position.



Bumper bar installation and removal

To install the bumper bar, insert the tracks on each end of the bar into the tracks on the stroller frame (near the centre fold hinge) until you hear a **CLICK!**

To remove the bumper bar, press the release buttons located on the underside of the bumper bar retaining bracket (as pictured below).




Buckling and un buckling the harness

Buckling the harness:

1. Place your child in the seat. Make sure that your child's back and bottom are flat against the seat. This will maximise comfort and allow the harness to properly secure your child.
2. To fit the harness, link the two right hand fittings together and then **CLICK!** into the buckle. Do the same for the two left hand fittings. Check that the buckle is secure by pulling the buckle. There should be a strong connection.

Un buckling the harness:

1. To remove the harness, press the large button on the front of the buckle until it releases (as pictured below).

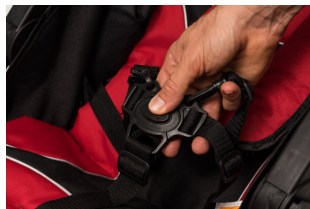

Parking brake and front wheel lock

Parking brake:

To engage the brake, with your foot or hand firmly push down the bar located on the rear wheel axle downwards. This brake locks both rear wheels. Always check the stroller is firmly braked.

To release the brake, lift the lever upwards.



Front wheel lock:

The swivel lock is located near the top of the front wheel.

Locking the front wheel:

Move the lever (as pictured in (a)) to the right hand side (when facing the front of the stroller). The lock will engage when the front wheel is straight.

Freeing the front wheel:

Turn the lever to the left (when facing the stroller) as pictured in (b).



Caring for your stroller

- We recommend storing your stroller indoors to avoid corrosion.
- We recommend regular inspection and maintenance of locking devices and security of essential components.
- Regularly check all parts for wear and tear. Lubricate if tight with a silicone based product. Do not use spray petroleum lubricants such as 'CRC'.
- The fabric is washable. To clean the liner, we recommend sponging with warm soapy water and a mild detergent. A mild disinfectant may be used if desired.
- **NEVER** tumble dry.
- **NEVER** clean with abrasive, ammonia, bleach or spirit based cleaners.
- If the wheels become damaged or worn, discontinue use and replace.
- Avoid sun exposure for long periods to prevent fading and damage to the fabric.
- Avoid contacting product with salt water. If you do expose it to salt water, ensure you wash the frame (particularly moving parts) in cold fresh water and lubricate moving parts with silicone.
- **NEVER** wring any fabrics.
- Dry thoroughly before storage.
- Store in a well-ventilated area, away from direct sunlight which could damage or fade your car seat.
- Store in a safe place when it is not being used. Avoid placing heavy objects on top of it.
- **NEVER** allow the seat to come into contact with corrosive substances such as battery acid or petroleum products.

Warranty information

All Adventure products are guaranteed for one year from the date of purchase against defects in material and workmanship.

If we determine that the product has a manufacturing fault, we will repair or replace it free of charge to you. The decision to repair or replace is solely at the discretion of Adventure. Proof of purchase must be provided.

The warranty is “return to base” and not a free in-home service. This means the customer is responsible for any inwards freight charge to return the product to an Adventure representative for warranty or service.

Our warranty excludes claims resulting from misuse, abnormal use, overloading, general wear and tear, child outgrowing the product, not following instructions, transportation damage (including airline or freight damage), poorly maintained product, dropped goods, negligence, second-hand product, modified product, colour fading, over inflation, mould, damage to handle foam in use or fabric cuts and tears. Our warranty also does not cover tyre punctures or corrosion to frames or fasteners as a result of atmospheric or environmental conditions.

Any replacement will not give the right for the warranty period to be extended.

Adventure does not cover warranty if the product has been purchased second hand or from an unauthorised reseller.

Adventure
PO Box 35-445
Browns Bay, Auckland
0753

e: team@adventurekids.nz
p: +64 9 270 3406

